



To find out if you have a leak in your pool or spa, follow these easy steps.

1. Turn off the automatic fill valve.



2. Place a bucket on a step where the bucket rim is at least a few inches above the water line.



3. Place a heavy weight in the bucket and add water until the water level inside the bucket is equal with the water in the pool.



4. Leave the bucket in the pool undisturbed for several days, and then compare the water level in the bucket to the water level in the pool. If the water level in the bucket is noticeably higher than the water level in the pool, you may have a leak in your pool. Contact a pool leak detection specialist for more help.

